



8.7" ADV LIGHT CANNON


Installation Instructions & User's Manual





VISION X



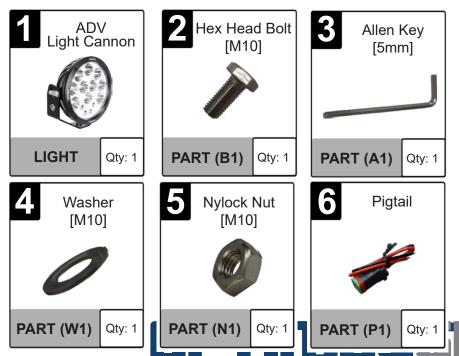

About The 8.7" ADV Light Cannon:

FEATURES

- 1. Iris Reflector & Optic Technology Combo
- 2. Heavy Duty Trunnion Bracket
- 3. Snap-On Covers Available

8.7" ADV LED LIGHT CANNON SPECIFICATION

Warranty : Extended
Amp Draw : 11.67A @ 12V DC
Input Voltage : 9-32V DC
Beam Patterns : Mixed

5. LED Lifespan : 50,000 Hours

PREPARATION

- 1. We recommend completely reading instructions before installing.
- 2. Consult your local state regulatory agency regarding the use of LED lighting.
- 3. The placement of LED lighting should not restrict airflow to the radiator, or block head lamps, turn signals, or parking lights.

8.7" ADV LIGHT CANNON




WARNING: Bolts, Nuts, and Washers are Stainless Steel. <u>DO NOT USE</u> Pneumatic or Electric Tools to Tighten and Loosen. The <u>Hardware Will Permanently Lock Together</u>.

MOUNTING INSTALLATION INSTRUCTION

- Determine where the light/lights will be placed.
- Place mounting bracket with light to desired location. Using a marker or pick tool, mark the center point of the bolt hole on the mounting surface.
- 3. Set the light aside. Drill out a large enough hole to fit the [M10] bolt Part (B1).
- 4. Line up the mounting bracket with the hole you just drilled, slide the [M10] Bolt (B1) through both.
- On the other side of mounting surface slide the [M10] Washer Part (W1) and [M10] Nylock Nut Part (N1) onto the [M10] Bolt (B1). Tighten Nut & Bolt to desired tightness.


MOUNTING DIAGRAM

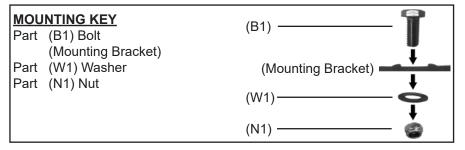

LIGHT ANGLE ADJUSTMENTS

- 1. Use the 5mm Allen Key (A1) to loosen the side bolts Part (B2) on each side of the light.
- 2. Adjust the light to your desired angle and tighten Bolts (B2).

LIGHT ANGLE ADJUSTMENT DIAGRAM:

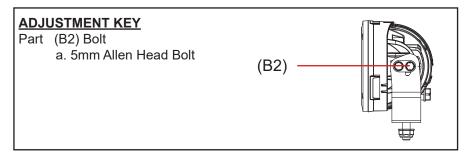





WIRING INSTALLATION INSTRUCTION

- 1. Supplied with the ADV Light Cannon is a 3" Pigtail Part (P1).
- 2. Connect the positive (red) wire and negative (black) wire into an existing power source.
- 3. To connect the Halo Wire Part (H1) tap the yellow wire to an existing power source or on its own auxiliary switch.

WIRING DIAGRAM

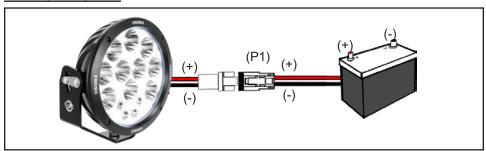

HALO WIRE:

 

MAINTENANCE

All Vision X models have been designed for maintenance free use. In the case an LED lamp or other part replacement is needed please contact your authorized service center.

TIP: For complete application guide see website

